






12. Remote control (direct ignition)

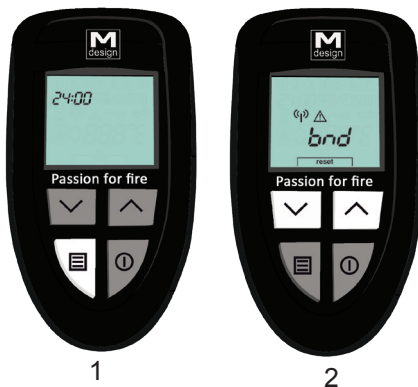

1. First use (Connect the remote control)



Keep pressing the button  until 24:00 appears in the top left corner (1).
Press several times on  until you see "bnd" on the screen (2).
Press shortly on  and 
You see the temperature on the screen. Your remote control is now connected.

2. Ignite the fire



Press simultaneously on  and 

You hear the ionisation pen ticking.
The ticking lasts for about 15 sec.
At initial setup, it's possible that the pilot flame doesn't ignite immediately because the pipes are not yet fully deflated.
You can try this up to 5 times before the unit will be placed in safety. If this fails, please contact your installer.

3. Manual control



From the moment the burner 1 is on, you can start with the flame height control.

The screen will automatically show manual control (flame height control)

Press on  until you see number 15.



This is the maximum flame height.

Choose a flame height from 1 to 15

by pressing  or 

2. Second burners

1. Main burner

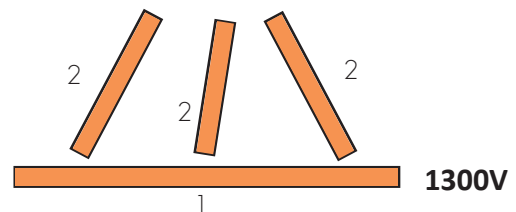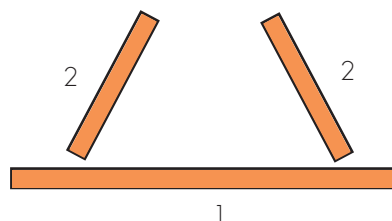

3. Manual control (continuation)



1




2



3



4

To light up the side burners 2, press .

First you see the wave settings (page 30).  or 

Press a second time  and you will see a "b0" or "b0"

Remark: If after a previous use of the fireplace, you turned it off in "b1" mode, next ignition, the burners 1,2 and 3 will light simultaneously. If, on the other hand, you have switched off the appliance in mode "b0" the appliance will switch on only with the burner 1

If "b0" appears, press  to "b1", side burners 2 lights up.

If "b1" appears, press  to "b0", side burners 2 will go out.

Choose a flame height from 1 to 15 by pressing  or 

To switch off the entire stove press 

4. Thermostatic control



1



2



3




4

In case you want to go to a thermostatic control, you follow the next steps:



Press 2x  the button until you see the screen with the symbols shown in picture 2.

Press  or  until the symbols  and  are blinking (pic 2).

Confirm your choice by pressing  (pic.3).

Choose a temperature with the "up" and "down" arrows (pic. 4).

Don't place the remote control near the fire. The temperature sensor is in the remote

control. To get back to manual control do the same until  and  are blinking.


Confirm with 

5. ECO WAVE

ecoWAVE : each model is standard delivered with ECO-WAVE

ECO-WAVE is an automatic cycle of fluctuating flames.

At each start-up of the fire, the system starts in ECO-WAVE mode !

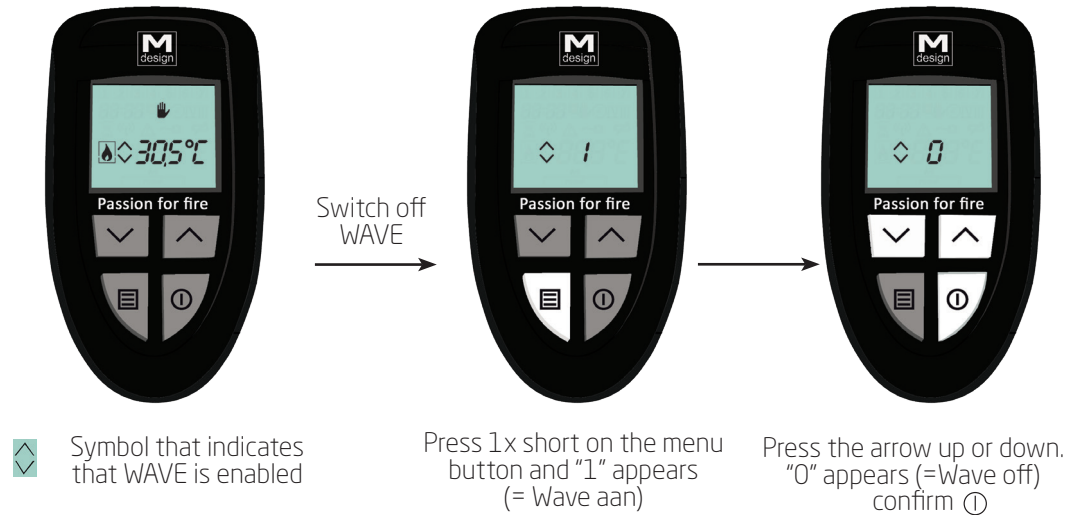

Shut down fire :

Press 1 x ① to turn off the fireplace. The fireplace will start-up with 1 or multiple burners depending on the "b" position.
Press 2x on the menu button to see whether the fire is set to "0" or "1" position.